


Customer	Morel - R�union
Sample ID	R�union 0-3 RL Roul�-Lav�
Test	AGGREGATES CHARACTERIZATION
Sample (g)	300
Lab address	PF Lab Services – Simbario (VV) – ITALY

MOISTURE CONCENTRATION: 0%

Particles size distribution

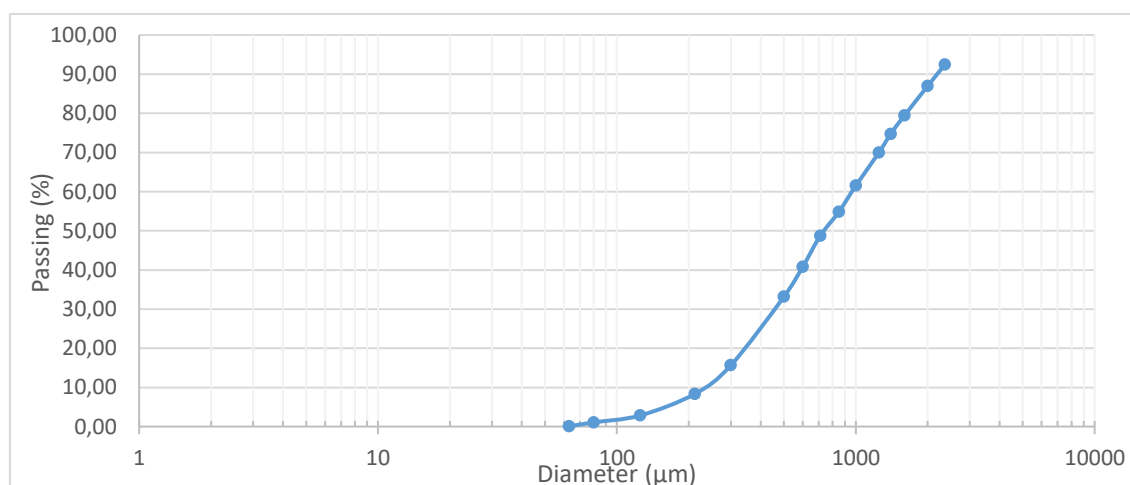

Particles size analysis

Diameter (�m)	Passing (%)
2360	92,43
2000	86,99
1600	79,47
1400	74,75
1250	69,97
1000	61,52
850	54,86
710	48,73
600	40,82
500	33,14
300	15,67
212	8,35
125	2,83
80	1,08
63	0,06

For the analysis were used Sieves mesh mall S Steel I.S.O. 3310 (UNI EN 933-2) and electric sieve shaker with timer (UNI EN 932-5 ISO 3310-1).